

Function Menu

GAIN	15.0	ALARM SHAPE	OFF	RECALL	Setup
PHASE	0.0	TOP	OFF	SAVE	Setup
FREQUENCY	2.0 MHz	BOTTOM	OFF	REC/REP	Exec
X:Y RATIO	1:1	LEFT	OFF	KEY CLICK	Off
PROBE	Locator	RIGHT	Off	POWER DOWN	10 min
HIPASS	DC	START ANGLE	10	LANGUAGE	English
LOPASS	300 Hz	END ANGLE	120	CONTRAST	12
DISPLAY	Spot	INNER	30	MINS	0
SWEEP	5.0 secs	OUTER	Off	HOURS	0
PERSIST	0.5 sec	ALARM TONE	Off	DAY	1
INPUT GAIN	Low	STRETCH	50 msec	MONTH	January
LOAD uH	8.2	VOLUME	5	YEAR	2000
GRATICULE	Rect A	BAUD	9600	SOFTVER	165 1m.13
SPOT X	0			OSP	01.05
SPOT Y	0			PIC	01.05

Power On/Backlight

1. Turn on with 1 short press on **Power/Backlight** button.
2. 2nd short press for low backlight.
3. 3rd short press for high backlight.
4. To turn off, press **Power/Backlight** button for 2 seconds.

Main Menu Set-Up

1. Press **menu**.
2. Use cursor keys to select item to change. Press **OK** once item is selected.
3. Top and bottom cursor buttons give small changes in value; left and right buttons give large changes in value. Once value is selected press **OK**.
4. To leave menu, press **menu** button once.

Automatic lift-off Compensation

1. To set Automatic lift-off compensation, one long press is required on the **Exec/Auto** lift-off button. This will set lift-off signal to the left of the screen.

User Programmable Softkeys

Defining Item:

1. To set a user programmable softkey, press **menu**.
2. Select item with cursor keys and press **OK**. Press and hold required softkey for 2 secs. The value in the softkey will change. Press **OK**, **menu**.

Changing Value:

1. To use softkey, press appropriate F key (Fn) and screen will show current value set.
2. Cursor key can then be used to increment values.

Preset Softkeys:


1. There are 3 preset softkey settings. These may be used by pressing **OK** from the operating screen.
2. Settings will cycle from user programmable to spot X:Y, box gate and sector gate.

Saving and Recording Set-Ups

1. From menu screen (press **menu** button from display screen) select save item with cursor keys and press **OK**.
2. With cursor keys select set-up or trace as appropriate. Press **exec** button.
3. Use cursor keys to select letters required and press **OK** to enter after each letter. Press **F1**(save)
4. To recall, select item and press **OK**. Select set-up or trace as required. Use **F5** (up) and **F6** (down) to select item. Press **F1** (recall).



Hocking NDT Ltd • 129-135 Camp Road • St Albans • Herts • AL1 5HL • UK
 Tel: +44 (0) 1727 795500 • Fax: +44 (0)1727 795400
 Email: info@hocking.com • Web Site: www.hocking.com

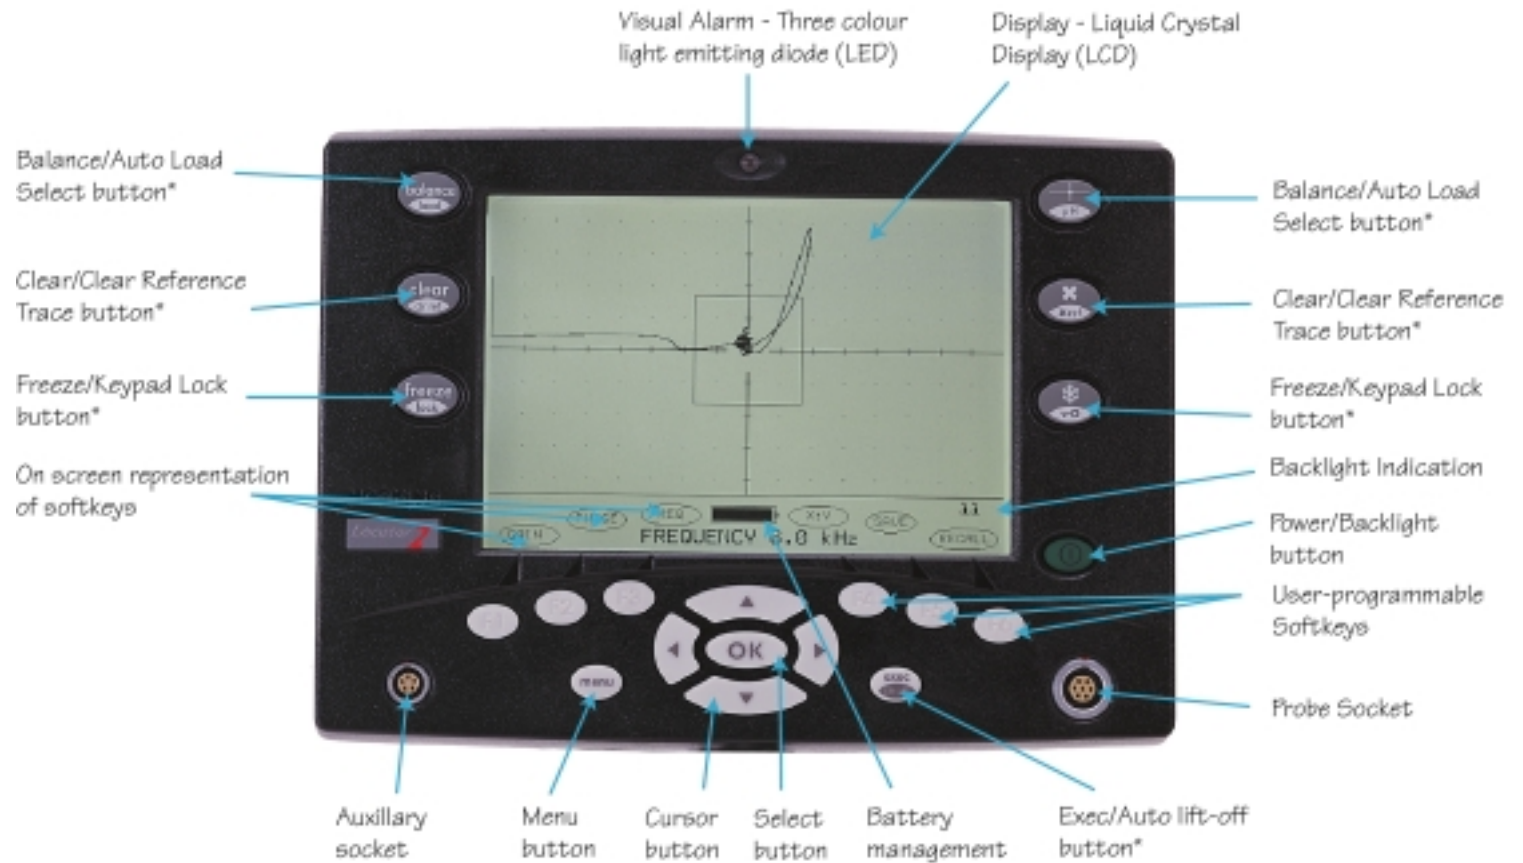

* Secondary functions are invoked by a long press